


# Dangerous Game - Adjusting/Removing Front and Rear Sight

## Removing Front Sight Hood




Use the 3/64<sup>th</sup> allen wrench to turn the screw to release the sight hood.

Tools Included in bag

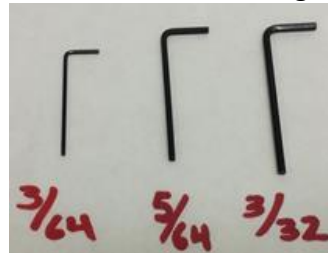

## Adjusting the Front Sight

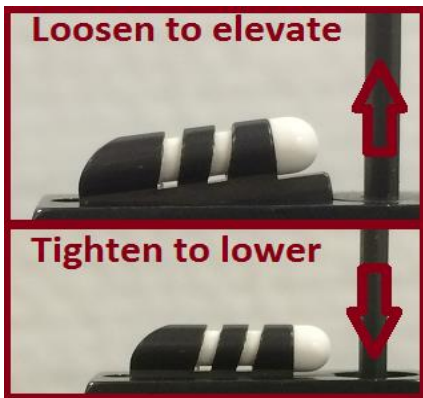

Use the 5/64<sup>th</sup> allen wrench to adjust the front sight.

Backing the screw out elevates the sight.

Tightening the screw lowers the sight.

## Removing the Front Sight



Remove the screw to release the front sight.

Pull the front sight rearward to unhinge it from the hinge pin.

To reassemble make sure when you're tightening the screw that the head of the screw is compressing the spring.

## Adjusting Rear Sight Windage



Use the 3/32<sup>nd</sup> allen wrench to release the dove tail lock.



Use a nylon hammer to free the sight.

Adjust the sight left or the right.

## Adjusting Rear Sight Elevation



To allow the sight to adjust use a flat head screw driver to release the two tension screws.

The adjustment screw adjusts the sight higher or lower.