




## Quick Detachable Pivot Mount Mounting Instructions

**Important!** The E.A.W. Mount will give you a life time of reliable service if you follow the instructions. The unique design assures a totally stress free mounting of your scope and the various adjustments allow you to remove all play.

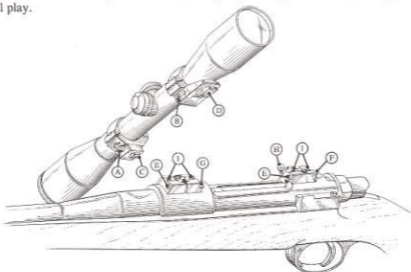

1. Clean and degrease top of receiver, bottom of bases and inside of rings.
2. Install mount bases on receiver with adjustment screws and locking lever on the right side. Use Loc-Tite on screw threads and under bases, being very **careful** not to get Loc-Tite into adjustments or locking lever.
3. Loosen levelling screws under front ring (B) and tension adjustment in front base (G).
4. Swing front ring in place and lock up rear ring in rear base.
5. Remove upper parts of the split rings.
6. Place scope into lower rings and check eye relief and alignment with Collimator or by bore-sighting. If the elevation is too far off, do not shim bases. The Elevation Block (C) under the rear ring is available in different heights in .020" increments. (J)
7. Snap upper portion of scope rings in place using the following procedure to avoid scratching of the scope tube:



Slip a piece of plastic or paper under both sides of the ring as shown in picture (K), snap ring in place and remove plastic or paper.



8. Lightly tighten ring screws. **Do not use Loc-Tite on ring screws!!** Level reticle and tighten screws as much as the proper wrench will permit you.